

**SYNERGY MANUAL ADDENDUM**

**SYSTEM VER 3.XX**

With the changes in the Synergy operating system, an update of the manual supplied with the unit is necessary in order to describe both the alteration or enhancement of existing features and the additional features now provided.

This manual update is in the form of additional pages for each chapter and in some cases the deletion of now-improper references to certain controls.

- ✓1) On page 5-2 delete the section titled "Other uses for the Restore Switch" and insert pages 5-3, 5-4, and 5-5.
- ✓2) Also on page 5-2, just below "Reset Tuning to A=440 cycles per second", add:
  - Reset RS-232 interface to "No Parity"
  - Reset Seqout to Momentary, Normally Open, Loop Off
  - Reset Recout to Momentary, Normally Open
  - Reset Midi to Channel #1, Omni mode
  - Disable Midi input record
  - Reset Midi output transpose and split
- ✓3) Insert page 6-5 after page 6-4.
- ✓4) Insert page 10-9 after page 10-8.
- ✓5) On page 11-2, just below "Pitch Bend Throw", add:
  - Midi Output Split
  - Midi Output Transpose
- ✓6) On page 11-3 delete the section titled "Restore Switch - erasing a Stored Program" and insert page 11-4 through 11-10.
- ✓7) On page 12-3, section "Space Light", first line change the number 1750 to 1950.
- ✓8) On page 12-4 in the section titled "The Sequencer as event recorder" and just before the start of the third paragraph, insert "In the case of recorded transpositions, only the key down half of the key cycle is recorded."
- ✓9) On page 12-7 replace the line "and will flash quickly when the Sequencer speed is exactly four times normal speed (this setting is all the way to the right on the knob)." with "or exactly 1/2 normal speed. The overall range of the speed control is 1/3 speed to 3x speed in 127 steps."
- ✓10) On page 12-8 delete the section titled "Transposition".
- ✓11) Insert page 12-12a and 12-12b between pages 12-12 and 12-13.

- 12) Delete the top two lines from page 12-13
- 13) Starting on page 13-8 delete the section titled "Set Switch Forced Allocation for Sequencer Tracks"
- 14) On page 13-9. the section titled "Set Switch - One Note Voices". change the sentence "The light for the set switch will then be turned off." to read "The light for the set switch will then be turned off and the light for the voice will be flashing indicating that it is set for mono mode." Also alter the following sentence to read "Until the above procedure is repeated.".....
- 15) In "Appendix A" insert pages A-1 through A-6.
- 16) On page B-2 change the number 1750 to 1950

This completes the alteration of the manual with respect to version 3.XX of the operation system. For more information on the optional connections refer to the (S)erial (I)nterface (A)daptor and the SYNHCS system user manuals.