


Operator 1-6 /All

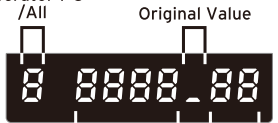


Original Value


Parameter

Parameter Value

EG / Pitch EG

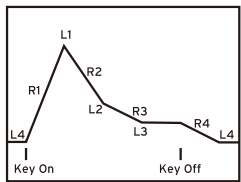

Level Scale

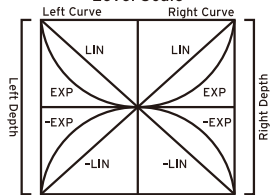

0n	Operator On/Off	00	OFF
		01	ON
EGr1	EG Rate 1	00-99	
EGr2	EG Rate 2	00-99	
EGr3	EG Rate 3	00-99	
EGr4	EG Rate 4	00-99	
EGL1	EG Level 1	00-99	
EGL2	EG Level 2	00-99	
EGL3	EG Level 3	00-99	
EGL4	EG Level 4	00-99	
LSbP	Level Scale Break Point	00-99	
LSLd	Level Scale Left Depth	00-99	
LSrd	Level Scale Right Depth	00-99	
LSLC	Level Scale Left Curve	00	-LIN
		01	-EXP

LSLC	Level Scale Left Curve	02	EXP
		03	LIN
LSrC	Level Scale Right Curve	00	-LIN
		01	-EXP
		02	EXP
		03	LIN
Ors	OSC Rate Scale	00-07	
Ans	Amp Mod Sense	00-03	
Kvs	Key Velocity Sense	00-07	
OLUL	Output Level	00-99	
OSCA	OSC Mode	00	RATIO
		01	FIXED
FrEC	Freq Coarse	00-31	
FrEF	Freq Fine	00-99	
dEtU	Detune	00-14	

PtR1	Pitch Rate 1	00-99	
PtR2	Pitch Rate 2	00-99	
PtR3	Pitch Rate 3	00-99	
PtR4	Pitch Rate 4	00-99	
PtL1	Pitch Level 1	00-99	
PtL2	Pitch Level 2	00-99	
PtL3	Pitch Level 3	00-99	
PtL4	Pitch Level 4	00-99	
Fdbk	Feedback	00-07	
OSs	OSC Key Sync	00	OFF
		01	ON
LFOd	LFO Delay	00-99	
LAmD	LFO Amp Mod Depth	00-99	
LFOk	LFO Key Sync	00	OFF
		01	ON
LFOw	LFO Wave	00	TRIANGLE
		01	SAW DOWN
		02	SAW UP
		03	SQUARE
		04	SINE
		05	S-HOLD
nSP	Mod Sense Pitch	00-07	
trSP	Transpose	00-48	

Algorithm



Modulator Knob



Carrier Knob

KORG

volca fm
DIGITAL FM SYNTHESIZER

